PLC KITS Quick Start Guide

Please read the Quick Start Guide carefully before using the product and keep it. Related tools and documents of products, please download from *www.herospeed.net*.

Statement

Thank you for purchasing our company's products, any questions&assistance you need, welcome to contact us at any time.

This user manual is suitable for PLC NVR Kits(Power Line Communication NVR & Power Line Communication camera). It will be updated according to product's updating, new version will be not noticed specifically.

Safety Precautions

1. Please modify default password promptly after the equipment is installed, to avoid being stolen.

- 2. Please do not place and install the equipment in direct sunlight or near heating equipment.
- 3. Please do not install the equipment in wet, dusty or soot-burning places.

4. Please keep the equipment horizontally installed or installed in a stable place, avoid the equipment falling down.

5. Please do not drop and splash liquid on the equipment and ensure no objects filled with liquid on the equipment and prevent liquid from leaking.

6.Please install the equipment in a well-ventilated place and do not block the vents of the equipment.

- 7. Please use the equipment within rated input/output range only.
- 8. Please do not disassemble the equipment without notifying supplier.
- 9. Please transport, use and reserve the equipment in permissible range of humidity and temperature.

Disclaimer

Please pay special attention to the following exclusions or restrictions:

1. If the product is terminated for any of the following reasons, our company shall not be liable for any personal injury or property damage to you or third parties:

A. The installation or use of equipment is not strictly in accordance with the requirements;

- B. State or public interest;
- C. Majeure;

D.Your own or third-party reasons, including but not limited to the use of third-party products, software, components and so on.

2. Our company does not guarantee the equipment for special purposes or use in any express or implied way. This equipment shall not be used for medical/safety equipment or other products which can cause life hazards and personal injury applications or dangerous uses of weapons of mass destruction, biological and chemical weapons, nuclear explosion and any unsafe use of nuclear energy or contrary to humanitarian purposes. Any loss or liability arising from such use shall be borne by you.

3. This equipment can perceive specific illegal invasion in correct installation and use, but it can not avoid accidents or personal injury and property loss caused by this. In daily life, please be vigilant and strengthen the awareness of safety precautions.

4. We are not liable for any consequential, accidental, special or punitive damages, requests, property losses, data losses and documents losses. In the maximum extent permitted by law, our liability for compensation shall not exceed the amount paid by you when purchasing this product.

Products Appearance Description

Ethenet, Audio Output, Audio Input, VGA, HD, USB, DC12V



Notes: Images for instruction use only, the final goods are subjected to the real object.

PLC NVR Kits Quick Installation Guide

PLC (Power Line Communication), it is the network signal coupled to the power transmission line, no need cable, Plug and play, no need any setting, easy installation.

Step1: Installation Preparation

Install HDD. Make sure all the power are cut before intalling.

Installation tool: Cross screwdriver. (Notes: Please use professional hard disk recommended by supplier.)



1. Loosen the screws on the base plate and remove the upper cover.



Align the screw holes on the hard disk with the screw holes on the base plate and tighten the hard disk to the bottom with screws.



3. Plug in the hard drive cable and power cable.



 Align the cover against the base and gently close it. Tighten the top cover to the floor with screws.

Keep the connected PLC camera and PLC recorder at the same ammeter, then we can operate it. The default NVR address http://192.168.1.88, refer to the below connection.



Please pay special attention when installing:

1. With the same meter, no more than three air switch.

2. PLC camera power supply for the 1A, the label is black; PLC recorder power supply for the 2A, the label is silver, as shown below.



Notes: Images for instruction use only, the final goods are subjected to the real object.



Make sure the PLC KITS work normally: NVR connection the monitor, and all the devices are in power. When the monitor display the videos of all the IPC, it shows the devices running well.

Note:Make sure the power supply in the regular voltage(100V ~ 240V), it can not be under or exceed the scope of the power supply, or the PLC kits will be damaged.



Notes: Images for instruction use only, the final goods are subjected to the real object.

System login

Start up the NVR,right click the desktop and enter the user login interface.

Input the user name and password.

System default user name : " admin" password : "12345".

User Login	×
aumin	*
English	~
Login Close	
Forget	password

Preview

Enter preview interface after device start up.Preview interface include date and time of system, and channel name.Login system, double left click to switch between full screen and multi-screen.

Menu basic operating instructions

1. Enter menu mode

Login system,right click to popup shortcut menu. Left click [Menu],enter the main menu interface. Left click [Playback], enter playback operation interface. Left click [Record], enter record setting operation interface.

2. Exit menu mode

Right click to exit menu mode. In the menu mode, right click to return to the previous menu (also for other menus).



Shortcut menu introduction

Click the right mouse button pop-up shortcut menu, shortcut menu consists of the following three parts:

Preview mode: Select the preview mode in the menu bar you like.

Shortcut menu mode: In the menu bar wheel tour, video settings, add equipment, video playback, PTZ settings and NVR image color, you can directly enter the appropriate menu.

Main menu : Click to enter after the [Playback], [Export], [HDD], [Record] , [Camera], [Configuration], [Maintenance], [Shutdown].



Record

1. HDD formatting, to ensure that the hard disk has been detected and work normally (you can check status of HDD from menu "HDD" -" General").



2. In the shortcut menu, click **[Record]**, enter the video settings interface, or in the main menu, click the left mouse button **[Record]**, to enter the video settings interface, NVR default all time ordinary Video.



3. Motion Detection Seetting, Enable "Motion" to activate motion recording, motion sections have no more than 6 times each day. If the setting of manual record and motion record are overlapped, it can only save the motion records while motion detection cames up.



Playback

Enter **"Playback"** interface by clicking **"Playback"** from shortcut or main menu, select channels and search the record files and playback what you want.



(Video playback interface)

Live View

1. Left click 【1-Win】/【4-Win】/【8-Win】/【9-Win】 in the menu, it is available to add single channel or multi-channels on one screen.



2. PLC kits have matched Add Camera by default.Keep all the devices at the same ammeter, power on, it can realize the time preview when connecting the display device, if you change the defaulted IP address of IPC, you need to re-add the remote device.



As Follow the above image, enter into the page of remote device by left-click at shortcut menu.

- ① Keep the NVR & IPC at the same ammeter.
- ② Delete it, if you have added the device.
- ③ Click the menu "Add".
- ④ Tick all the devices you want to add.
- ⑤ Click "add".
- 6 Click "cancel" to return to the interface of last.

Webpage NVR Login

1. Login NVR LAN(Same router in same computer, also named intranet)

① Connect PC with LAN of NVR with internet, confirm NVR and computer with the same network segment. If computer do not have the network segment, need add one same network segment with NVR. For example: '192.168.1.33'(Note: NVR default IP address is 192.168.1.88).

② Open IE browser, choose Tool- internet item-safe-default level-ActiveX Controls and plug-ins, All choose start using.

③ Search NVR or open IE Browser input NVR address Trought Search Tool: for example http://192.168.1.88(if NVR port 80 change to be other, need add the new port)

④ Login NVR , Default User :admin, password : 12345

⑤ Preview NVR through PC , Click player button in the bottom interface of 'LiveVideo'.



				ICACE SCARCII							
Inter	Model	Clastice Harris	Firmaura Varaine	P Address	Salest Mash	Gáillag	04	MAG	NTT*Pet	110	Technick Parama
- 404	MR	HR	MVR_140536	52.91.99146	255,255,248,3	172.18.192.2	52.9.922	R42029		- 55	17 Address
900	XXR	XXR	X88,3594,	\$72.91.931236	255.255.240.3	172.18.192.2	52.9.922	84.99.99.99.99.90		- 95	
	MR	HR	MR/10536	972 91 997 982	2525263	172.18.192.2	92.9.922	*******		- 95	(udrethtick
	MR	HR	MR.H0536	02.01.095.95	2525263	172.18.192.2	12,931.11	94.92.97.38.94.0A		- 95	Omfile
. 466	MR	100	MR_H0536	CQ 88 PH 94	2525263	172.18.192.2	92.0.022	RC120123015		- 95	DAS
906	100		MR_H0836	CQ 88 196 63	25255.263	172.18.192.2	252 M 104 00	8.0.0.0.0.42		91	HETPEN
_ eer	10.05	1005	NVI.)40828	172 18 193.6	255.255.248.8	172.18.192.2	12.00.00149	PERC 40.42 58 CD		- 65	
000	2/8	2016	201_30342	12.11.114.114	264.264.268.8	172.18.192.2	1/2.18.192.2	8644483481184		- 65	1038-148
000	1975	1005	MACHINE.	12.26 18.78	210.210.210.8	1/2 28 18 1	172.28 18 1	00.0018/07/43 72		- 11	
010	27/8	2010.0	X90,0034	12.10.10.110	218 218 218 3	172.18.192.2	1/2 18 192 2	IA ID 27 AD HE CI		-	SECURITVEREY
	1975	1000	MW,H0020	12.10.10.10	210 210 218 3	172.18.192.2	172.18.192.2			- 11	Charitiane
- 42	DVR	DIR	IDUMUS-	10.10.101	255 255 298 3	172.18.192.2	172.18.192.2	02 K2 20 58 27 69		- 10	Password
012	7/8		119,1012	12.11.113.165	255 255 248 8	172.18.192.2	172.18.192.2	F234351F3438		- 16	
014	7/R	XR	149,4004	192.10.194.205	255255243	17210.1022	52.98.992.2	8246540C9032		55	Midly
0.05	MR	NR	MR.)10798	1211110231	25225243	17210-002	52.9.922	00000000		- 55	

3

(Search Tool)



(4)



(5)-1



2. Login IPC LAN(Same router in same computer, also named intranet)

① First set the PC's IP address and IPC for the same network segment, such as PC's IP can be set to "192.168.1.104" (Note: IPC default address of 192.168.1.100 ~ 103).

② Open IE browser, choose Tool- internet item-safe-default level-ActiveX Controls and plug-ins, All choose start using.

③ Search IPC or open IE Browser input IPC address Trought Search Tool: for example http://192.168.1.100(if NVR port 80 change to be other, need add the new port)

④ Login IPC: Default User :admin, password : admin

⑤ Preview ipc through PC: Click player button in the bottom interface of 'LiveVideo'.



1

	106											
inter .	Model	Cashoa Marmar	Frenzes Terrist	Politica	Subrat Mask	GateWay	DWS	WV2	HTTP Park	110 ¹	MONOX Paran	
- 004	MR	MR	MVR_H0536	52.9.98.65	2512513410	172.98.982.2	12.10.1022	004012132936	- 00	- 69	17 Andrew	
902	35R	X/R	X98,3034	\$72.98.90226	2512512414	12.10.1022	112.18.192.2	6A.0.0.0.0	- 00	-		
- 000	MR	MR	849,10536	92, 9, 97, 92	252252444	02.91.9822	02.98.9922	000041303527	- 10	- 10-	SubweMack	
	MR	MR	848,10536	92.0.05.95	210203444	02.91.922	102.108.1.1	94/10/97/08/54/04	- 10	- 10	Gerriny	
- 446	MR	MR	848,10536	92.0.05.94	2112212410	02.01.02.2	02.98.9922	00.0130703045	- 10	- 11	CAU	
006	MMR.		AVR.)-0536	12.0.05.0	201.201.248.0	12 18 192 2	262.96.134.133	RE40.90.99.90.40	80	м,	HTPPM	
007	10.00	10.05	AVR.)40520	1/2/18/193.8	201.201.248.0	12 18 192 2	112 18 195 55	PERCENT/SECO	80	- 65		
008	274	25/8	WI,8794	172-18-194-184	211 211 241 0	10.16.16.2	10.18.192.2		80	65		
000	158	1585	we was a	172.28.18.79	211 211 211 0	112 20 18 1	112 20 18 1	10.10.10.07.40.72	10	-		
010	27/8	WU.	2/10/00/00	172.18.196.110	211 211 211 0	10.11.10.2	10.18.18.2	IA 10 32 AD IN CI	10	-	SECURITY	REY
	158	1595	NR.)-0120	177.18.103.163	211 211 211 0	10.10.10.2	10.18.18.2	46 43 36 33 33 38	10	- 10	Usediana	
012	DVR	DVR	10,019,35-	172.18.106.122	216 216 218 0	10.10.10.2	111.10.101.2	82 62 33 50 27 10	10	-	Passent	
012	7/8		INVERSE.	\$2.18.100.165	255 255 248 0	10.10.10.2	12.10.1012	F2.34 09.9F 31.99	90	-		
014	75R	Y/R	INQUERT.	\$2.9.9426	255.255.348.0	12.10.10.2	122.10.102.2	021054003837	- 10	55-	Multy	
015	MR	MR	NV9,10296.	\$2.9.9729	255.255.346.0	12.10.1012	12.10.1012	10.0010-0010-02	- 00	65-	Estad/Seco	0.0

3

(4)-2

(Search Tool)

(First connect need download and install plugin)







P2P Visit NVR

1. When you make sure the NVR already connect the network, enter the main menu [Configuration]-[Network] setting, enter "P2P', click "Start P2P" until it show "Online"

2.Type http://www/freeip.com/ in the browser that the network can work in outer net, log in account-configuration management-quickly adding device(type the device serial number(NVR main menu-network-P2Pinterface can check the NVR serial number)), user name(admin), password(12345)-My FREEIP-choose adding device, preview real time videos(Remark: The first time log in the web need to download the OCX first, then you can view the videos)



Enter [Configuration] setting in the main menu



Chose **[Network]** in the **[Configuration]**, enter "P2P"-click "Start P2P"-Show "On line"





Mobile APP access NVR

Download and install FREEIP to you mobile phone through the ways as below:

1. Type "FREEIP" to search in Google store by Android phone or APP store by iOS phone

- 2. Scan the QR code as below correspondingly
- 3. Type the website in your mobile phone as below correspondingly

Android App download address: https://play.google.com/store/apps/detail?id=com.xc.hdscreen IOS APP download address: https://itunes.apple.com/cn/app/freeip/id898690336?Mt=8 Start FreeIP APP(New user need to register an account to log in, if you have FreeIP PRO account you can log in directly), adding the device according to the steps as below, and preview the videos.

① Click 【Device】 to add the device.

O Click the button of the interface [+Add device] , select " the serial number add" into QR code scanning interface.

- ③ Scan the QR code on the device sticker or poster on the webpage to add the device.
- 3 Enter the user name, password, verification code, and then click [Submit] .
- (5) Click 【Preview】.
- 6 Click [+] to enter [Device] interface.
- O In [Device] , please choose the device you want to preview, then click [preview] .
- (8) You can choose different definitions in the preview interface.

